

Refrigeration-unit selection

SELECTION BY USEFUL VOLUME

One exact group for each cold-room configuration

The M&R model, power input and electrical protection below are assigned directly to every cold room supplied with an integrated unit.

MODE	M&R MODEL	USEFUL VOLUME	POWER	FUSE
 0...+5 °C	MRG.SG.5-10-P	5–10 m ³	2.845 kW	1 × 10 A
 0...+5 °C	MRG.SG.10-18-P	10–18 m ³	3.025 kW	1 × 10 A
 -20...-18 °C	MRG.SG.5-10-N	5–10 m ³	3.725 kW	1 × 16 A
 -20...-18 °C	MRG.SG.10-18-N	10–18 m ³	4.990 kW	1 × 20 A

DE

Bis einschliesslich 10 m³ wird die Gruppe 5–10 verwendet; über 10 bis 18 m³ die Gruppe 10–18. Die Auswahl richtet sich nach Nutzvolumen und Temperaturklasse.

FR

Jusqu'à 10 m³ inclus, le groupe 5–10 est utilisé ; au-delà de 10 et jusqu'à 18 m³, le groupe 10–18. Le choix dépend du volume utile et de la classe de température.

IT

Fino a 10 m³ inclusi si utilizza il gruppo 5–10; oltre 10 e fino a 18 m³ il gruppo 10–18. La scelta dipende dal volume utile e dalla classe di temperatura.


EN

Up to and including 10 m³, use the 5–10 unit; above 10 and up to 18 m³, use the 10–18 unit. Selection depends on useful volume and temperature class.

IMPORTANT

Use the order-specific product data. Cold rooms without an integrated unit do not receive these electrical values.

Unit dimensions and installation clearance

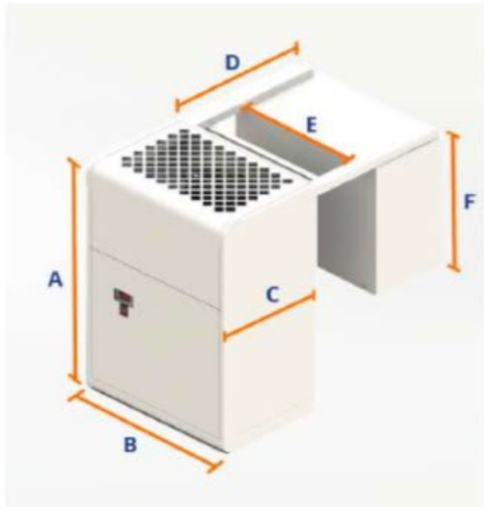

REF.	MRG.SG.5-10-P / MRG.SG.10-18-P	MRG.SG.5-10-N	MRG.SG.10-18-N
A	728 mm	883 mm	882 mm
B	421 mm	597 mm	635 mm
C	349 mm	394.2 mm	432 mm
D	610.1 mm	566.2 mm	566.2 mm
E	315.2 mm	489 mm	529.6 mm
F	323.2 mm	323 mm	523.2 mm

DE Die Buchstaben A–F beziehen sich auf die Masspfeile der schematischen Darstellung. Vor Montage sind Freiraum, Luftführung und Servicezugang am Aufstellort zu prüfen.	FR Les lettres A–F correspondent aux repères du schéma. Avant le montage, vérifier l'espace libre, la circulation d'air et l'accès de maintenance sur le site.
IT Le lettere A–F corrispondono ai riferimenti dello schema. Prima del montaggio verificare spazio libero, flusso d'aria e accesso per la manutenzione.	EN Letters A–F refer to the dimension markers in the diagram. Before installation, verify clearance, airflow and service access at the site.