
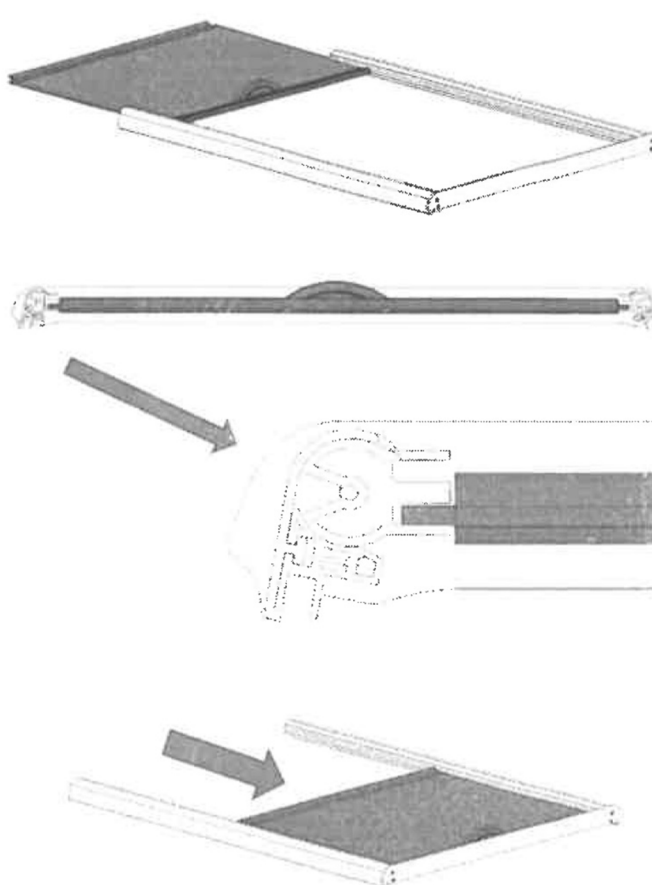




1. Fix the head to the profiles, take care to align the track indicated by the arrow.

2. Insert the glass with two gaskets into the lower track and push it up to the head.

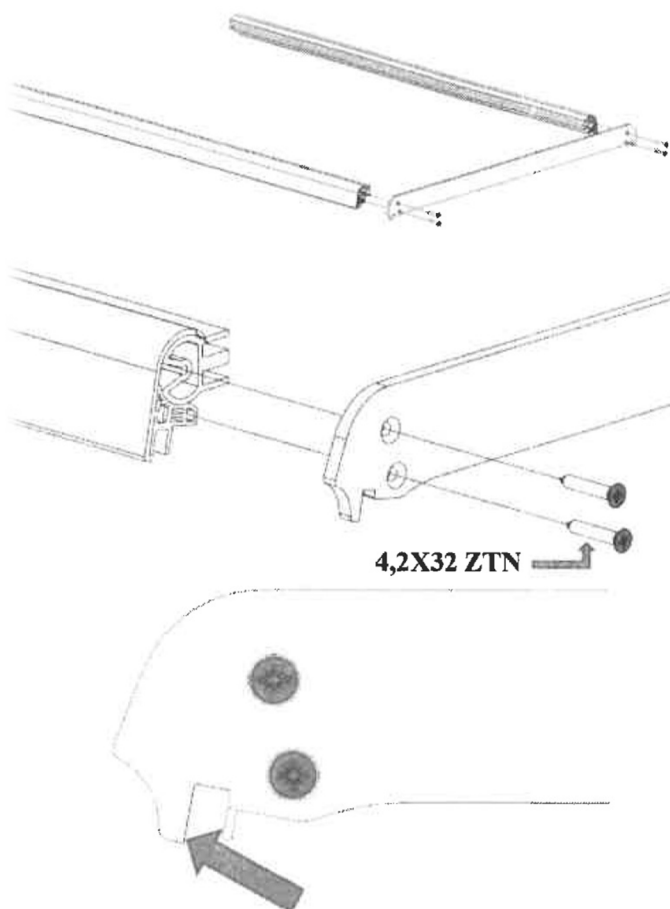


3. Insert the second glass into the upper track.

4. Press the trim to fit the gap of the glasses.

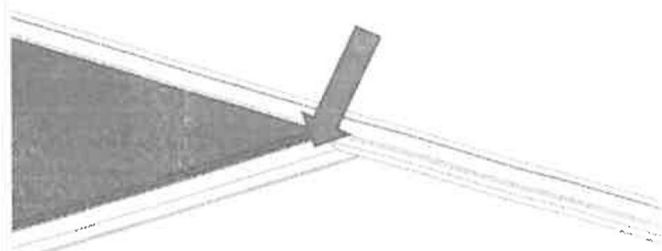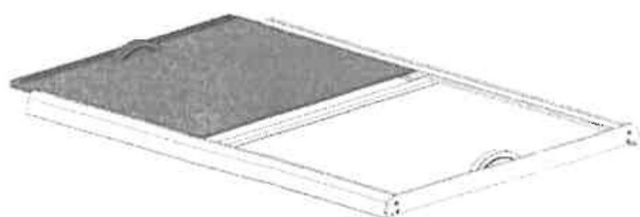

5. Fix the closing head as in point 1.

6. Make sure the glasses are sliding easily.

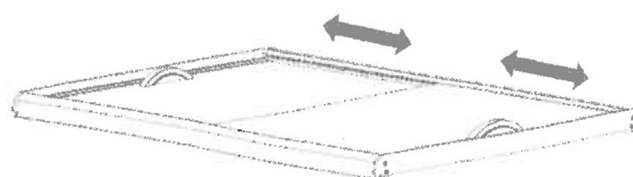

7. On the PDC, loosen the 2 screws on the glass of the upper head to be able to move it.

8. Distribute silicone on the upper part of the front glasses and on the sides of the refrigerated display case.



9. Stand vertically centered on the showcase, lower and insert the profile into the front glasses.

10. Push the window slightly to insert the profile. Once inserted, press along the entire length of the profiles and check the sliding of the glass. Wait for the silicone to dry.

